


Panhard Mount ALL56152 INSTALLATION INSTRUCTIONS

- 1. IMPORTANT! Before welding adjuster to chassis, use a 3/8" drive ratchet extension to turn adjusting screw and position slider as far away from welding heat as possible. This will protect the PTFE bushings from melting. Unit has 3" of screw adjustment.
- 2. To prevent damage of slider components, never exceed 30 foot-pounds of torque on adjuster screw.
- 3. To prevent binding of slider, never clamp adjustable panhard mount beyond retaining rings.
- 4. Keep light tension on nylon set screw to prevent screw from moving on its own.

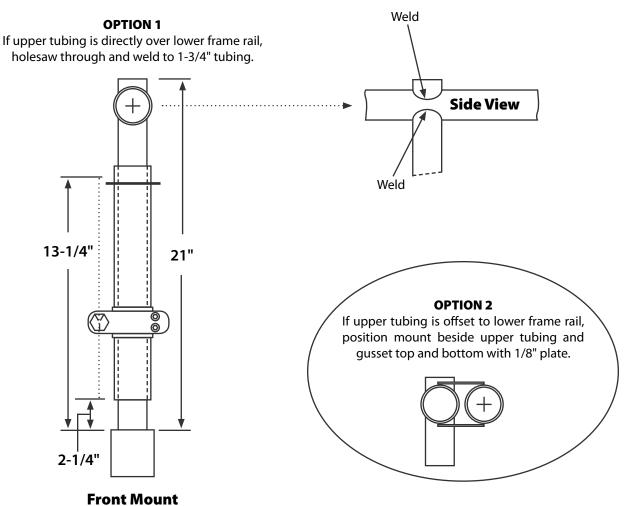

(unit accepts any 1-3/4" panhard clevis not included)

Allstar Performance 8300 Lane Dr., Watervliet, MI 49098 Phone: (269) 463-8000 Fax: (800) 772-2618 www.allstarperformance.com